


Application aid >

Plotted products, 3D elements and 3D lettering (chrome)

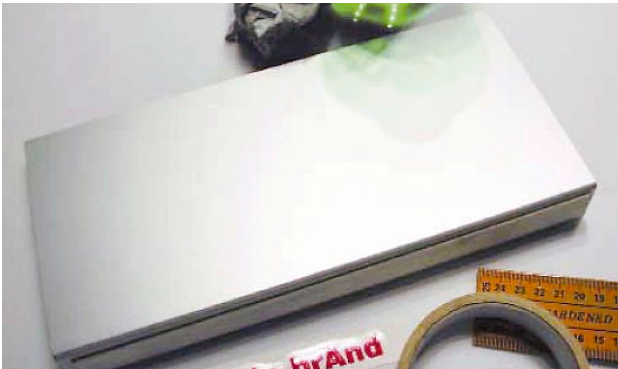

Preparation

Clean the surface: The sub-surface must be clean and dry, and free of grease and silicone. Pre-positioning of the inscription, painter's tape made of crepe (paper), measuring instruments.

Tip: Do not use normal adhesive tape. Instead, use painter's tape made of crepe (paper), which can be removed easily.




Placement and fixing

Step 1: Use the painter's tape to fasten the uppermost foil (application tape) of the inscription at the edge.

Tip: Ensure that the painter's tape is somewhat shorter than the inscription.

Step 2: Position the measuring instrument and adjust the inscription (be careful while tracing or carving).

Step 3: Use the painter's tape to fasten the inscription.

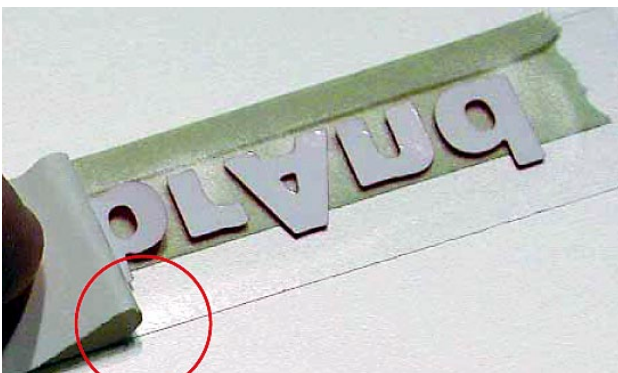

Remove the carrier foil or paper

Step 1: Re-located the fixed inscription – The carrier medium at the top is now ready to be removed.

Step 2: Pull off the carrier medium in a slow and balanced fashion, such that the curvature is kept to a minimum.

Tip: Run a check to ensure that no individual characters are breaking away from the underlying foil (application tape).



Paste the inscription

Step 1: Re-located the fixed inscription – The uppermost foil that is above the inscription is now ready to be removed.

Step 2: **Use your hands to press the inscription firmly onto the sub-surface.

Step 3: Remove the painter's tape.

Step 4: Pull off the uppermost foil (application tape).

**In case of large surfaces of plotted products, use the appropriate auxiliary mounting devices for the wet application process, or assign this task to a local specialised company. Contact us.