


# Application aid >

Plotted products, 3D elements and 3D lettering (chrome)

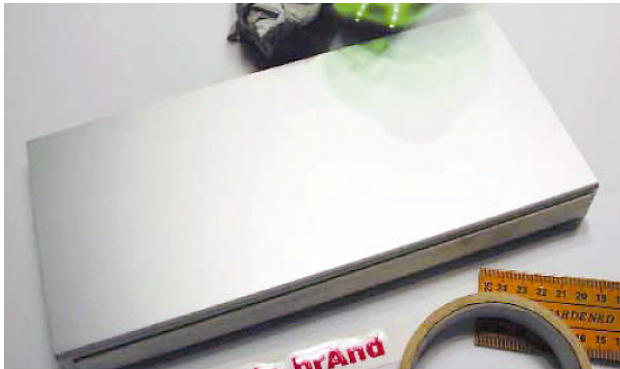

## Preparation

**Clean the surface:** The sub-surface must be clean and dry, and free of grease and silicone. Pre-positioning of the inscription, painter's tape made of crepe (paper), measuring instruments.

**Tip:** Do not use normal adhesive tape. Instead, use painter's tape made of crepe (paper), which can be removed easily.




## Placement and fixing

**Step 1:** Use the painter's tape to fasten the uppermost foil (application tape) of the inscription at the edge.

**Tip:** Ensure that the painter's tape is somewhat shorter than the inscription.

**Step 2:** Position the measuring instrument and adjust the inscription (be careful while tracing or carving).

**Step 3:** Use the painter's tape to fasten the inscription.

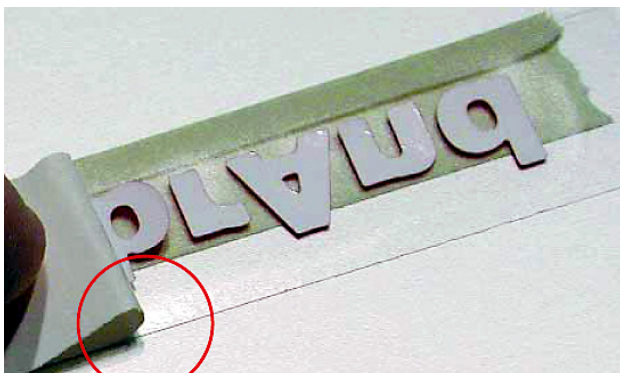

## Remove the carrier foil or paper

**Step 1:** Re-located the fixed inscription – The carrier medium at the top is now ready to be removed.

**Step 2:** Pull off the carrier medium in a slow and balanced fashion, such that the curvature is kept to a minimum.

**Tip:** Run a check to ensure that no individual characters are breaking away from the underlying foil (application tape).



## Paste the inscription

**Step 1:** Re-located the fixed inscription – The uppermost foil that is above the inscription is now ready to be removed.

**Step 2:** \*\*Use your hands to press the inscription firmly onto the sub-surface.

**Step 3:** Remove the painter's tape.

**Step 4:** Pull off the uppermost foil (application tape).

\*\*In case of large surfaces of plotted products, use the appropriate auxiliary mounting devices for the wet application process, or assign this task to a local specialised company. Contact us.